

**FAMILY RADIO SERVICE FREQUENCIES (aka freqs or channels)**

1---462.5625  
2---462.5875  
3---462.6125  
4---462.6375  
5---462.6625  
6---462.6875  
7---462.7125  
8---467.5625  
9---467.5875  
10--467.6125  
11--467.6375  
12--467.6625  
13--467.6875  
14--467.7125

**TONE CODE NUMBERS with TONE FREQUENCY (in Hertz)**

00...00.0  
01...67.1  
02...71.9  
03...74.4  
04...77.0  
05...79.7  
06...82.5  
07...85.4 (tones below 7 are not recommended)  
08...88.5  
09...91.5  
10...94.8  
11...97.4  
12...100.0  
13...103.5  
14...107.2  
15...110.9  
16...114.8  
17...118.8  
18...123.0  
19...127.3  
20...131.8  
21...136.5  
22...141.3  
23...146.2  
24...151.4  
25...156.7  
26...162.2  
27...167.9

28...173.8  
 29...179.9  
 30...186.2 (tones above 30 are not recommended)  
 31...192.8  
 32...203.5  
 33...210.7  
 34...218.1  
 35...225.7  
 36...233.6  
 37...241.8  
 38...250.3

---

**Motorola FRS Radio Frequencies**

<b>Talkabout Plus 200, 250 SLK Channel</b>	<b>Frequency</b>	<b>Talkabout Distance/DPS Sport 10X Channel</b>	<b>Sport 7/7X Channel</b>
1	462.5625	1	1
2	462.5875	2	2
3	462.6125	3	3
4	462.6375	4	4
5	462.6625	5	5
6	462.6875	6	6
7	462.7125	7	7
8	467.5625	N/A	N/A
9	467.5875	N/A	N/A
10	467.6125	N/A	N/A
11	467.6375	N/A	N/A
12	467.6625	N/A	N/A
13	467.6875	N/A	N/A
14	467.7125	N/A	N/A
N/A	462.575	A - 8	N/A
N/A	462.625	B - 9	N/A
N/A	462.675	C - 10	N/A

---